

Enter Programming Mode : Switch



INTERFACE_TYPE : USB Keyboard



LABEL_ID_UPCA : 00000000



LABEL_ID_UPCE : 00000000



LABEL_ID_EAN8 : 00000000



LABEL_ID_EAN13 : 00000000



LABEL_ID_UPCA_P2 : 00000000



LABEL_ID_UPCA_P5 : 00000000



EXPAND_UPCA_TO_EAN13 : Enable



Exit Programming Mode : Switch




00000

Enter Programming Mode : Switch



Composite Programing Label:

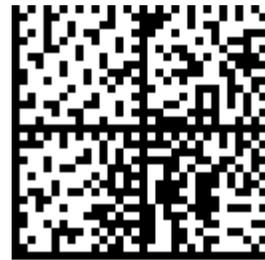

Exit Programming Mode : Switch

